


Programming the RTS Transmitter

Press the UP and DOWN buttons simultaneously on the RTS transmitter: the shade jogs and the control point is preprogrammed in the motor

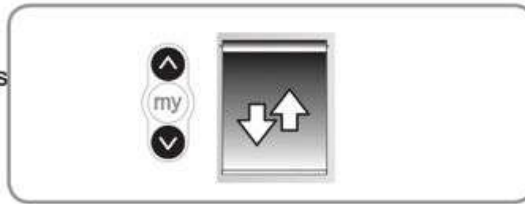

Checking the rotation direction


Press the RTS transmitter UP button:

a) If the shade raises (a), the rotation direction is correct: move to the section entitled Adjusting the end limits.

b) If the shade lowers (b), the rotation direction is incorrect: move to the next step.

b1) Press the RTS transmitter MY button until the shade jogs: the rotation direction has been modified.

b2) Press the RTS transmitter UP button to check the rotation direction.

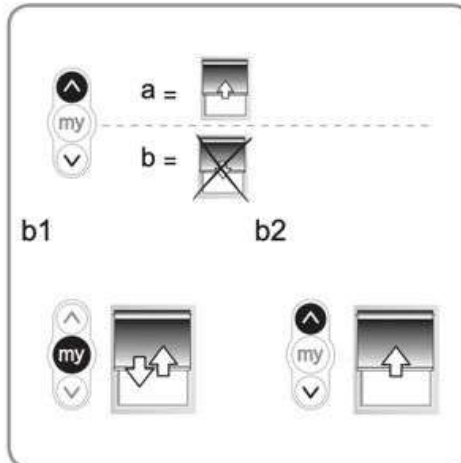

Adjusting the end limits

The end limits can be set in any order.

1) Press and hold the UP button to move the shade to the desired position. If necessary adjust the Up position, using the UP or DOWN buttons.

2) Press the MY and DOWN buttons simultaneously and release them once the shade begins to move.

The up limit is memorized.


3) Press the MY button when the shade reaches the desired Down position.

If necessary adjust the down position, using the UP or DOWN buttons.

4) Press the MY and UP buttons simultaneously and release them when the shade begins to move.

The Down limit is memorized. The shade moves up and will stop at its upper limit.

5) To confirm the end limits, press and hold the MY button until the shade jogs. The end limits are recorded.

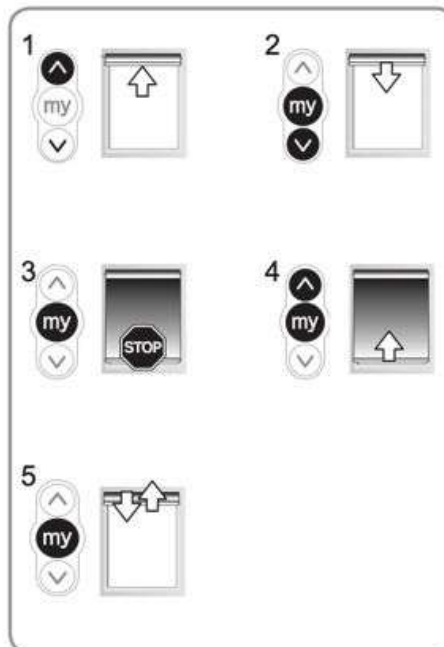

Exit Programming

Press and hold the programming button the back of the remote until shade jogs to exit programming mode.